

General Usage Instructions : Handle the parts with care: 3D-printed parts are fragile and do not withstand shocks well. Do not expose the parts to temperatures above 40°C or to direct sunlight. **WARNING:** Inside a vehicle during summer, temperatures can easily exceed 40°C.

Installing the Spreader Support on the Boat :

Step 1 : Preparing the handle

Remove the boat handle by taking off rubber grips to access the 4 screws.

Carefully identify the front (AV) and rear (AR) sides of the handle.

Step 2 – Attaching the support

Remove one screw located underneath the handle, then attach the support using the supplied screw. Reinstall the handle on the boat.





Montage de l'épandeur à l'avant du bateau :

Remove one screw located underneath the handle, then attach the support using the supplied screw. Reinstall the handle on the boat. The support(s) can remain permanently mounted on the boat.




Installing the spreader in this support :


- 1 – Unscrew the two star screws (1).
- 2 – Slide the weight and its support out of the spreader (2) and (3)
- 3 – Remove the support attached to the stainless steel weight (4)

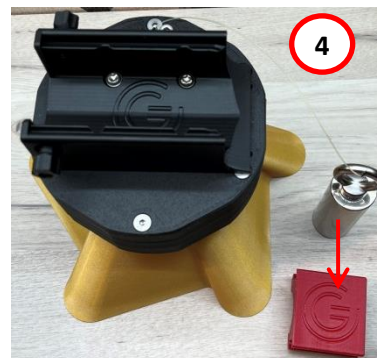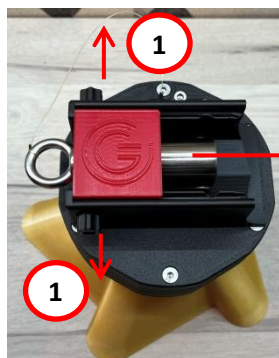

- 4 – Place the spreader on the boat by positioning it at the center of the handle (5), then slide it onto the pre-installed support (6), either at the front or rear, or at both positions if two spreaders are used simultaneously
- 5 – Tighten the two screws to lock the spreader onto the boat (7).

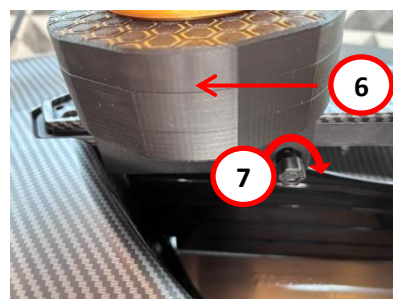

- 6 – Stick the adhesive pad onto the hatch, on the side opposite the pivot, directly aligned with its attachment point on the spreader.
- WARNING :** Make sure to degrease the hatch before sticking the adhesive pad.

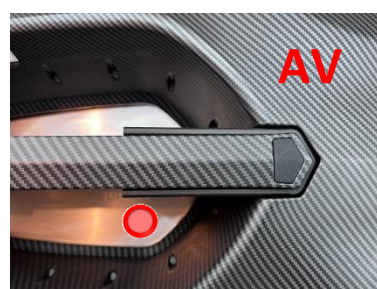

For usage instructions of the spreader, please refer to the manual supplied it.